

Removing the door card



The tools you will need is a 4 mm, 5 mm alen (imbus) keys, a cross head screwdriver and a cross head short screwdriver.



The first thing you need to get off is the in door handle.

You do it by unscrewing the 2 4 mm alen screws on the pic and the handle will fall out.

The second thing you must remove is the window switches.


There are 2 versions of them.



Version 1.

Take a flat screwdriver or a knife and insert it in the like on pic 1. (pic is of the opposite door but the principle is the same)

Now that you have inserted the knife lift the knife up, so the plate with the connectors comes out - second pic. and disconnect the connectors on the switches.

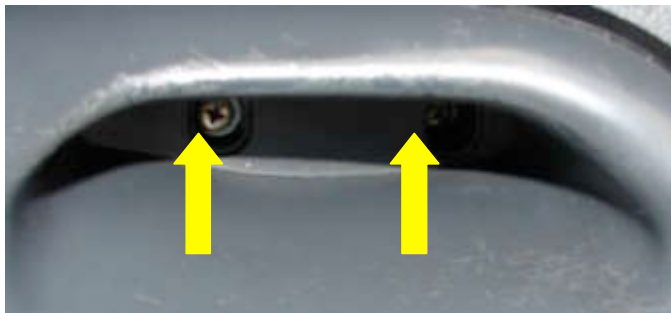


Version 2.

Remove the rubber "corks" so you get access to the screws - pic 1. (yellow arrows)

Unscrew the screws and then insert the knife like in the pic 2.. Lift the knife and take out the switch part.

Disconnect the switches connectors.

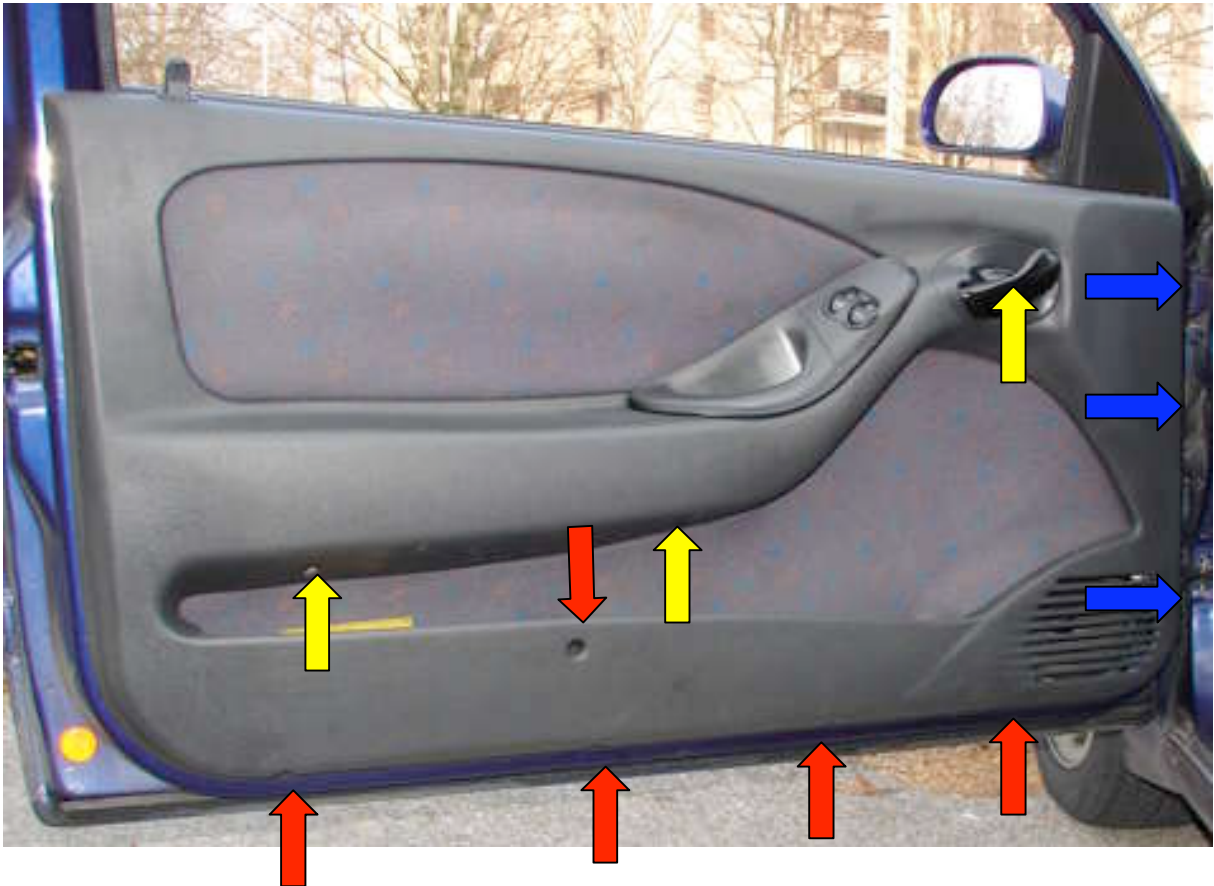

Now you have to remove the screws from the door card.

The pic shows where the screws are.


Yellow arrows - 5 mm allen key

Red arrow - cross head screwdriver

Blue arrows - short cross head screwdriver

Pic 2 is a segment of the door where you need to use the short screwdriver.

Pic 3 is a segment of the door card under the indoor handle

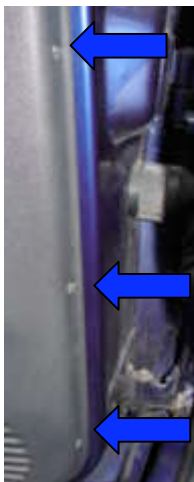




After all the screws are out, the door card is free to be taken off.

You do it like so:

Start pulling the door card from the yellow dot in the direction of the red arrow.

The door card will pull it self out of the holder (yellow arrow) and will have plastic "hills" like in the pic 2 or will have metal clips, that need to be taken out of the holder and put on the door card first before you put the door card back on.

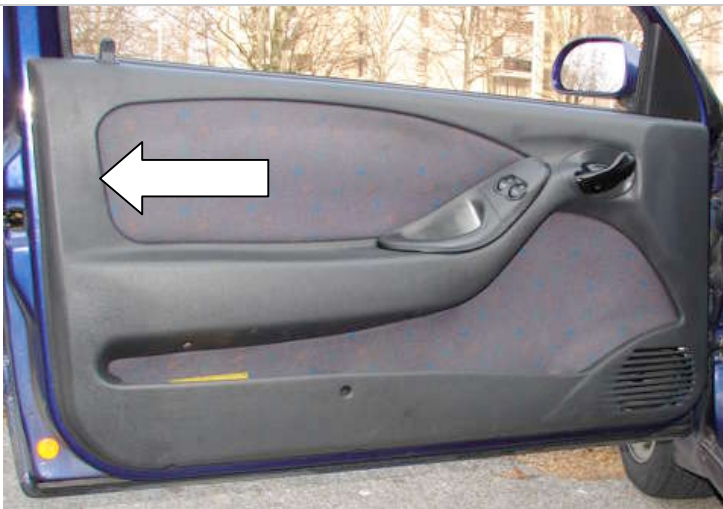

After the card is taken out of the holder you just need to slide it in the arrow direction so it falls of the clips.

Now the door card is off.

Repair of broken (red) door clip holders

If a holder broke off when you removed the card, you will need to glue it back on.



To do so, use some Loctite gel (pic left) or any other strong glue and just glue it back on the place it was. (pic 2 red circles)



Returning the door card



To return the door card, take out the clips that are left in the door (pic left is the look of the clip when its out) and put them in the red holders.

Clip the top part of the door in the door card holder, press the clips in and screw all the screws back in.



You are done 😊