


CHANGING THE POLLEN (CABIN) FILTER



Open the bonnet and locate the rubber strip shown by yellow arrow.




Next pull up the rubber strip up (red arrow direction)

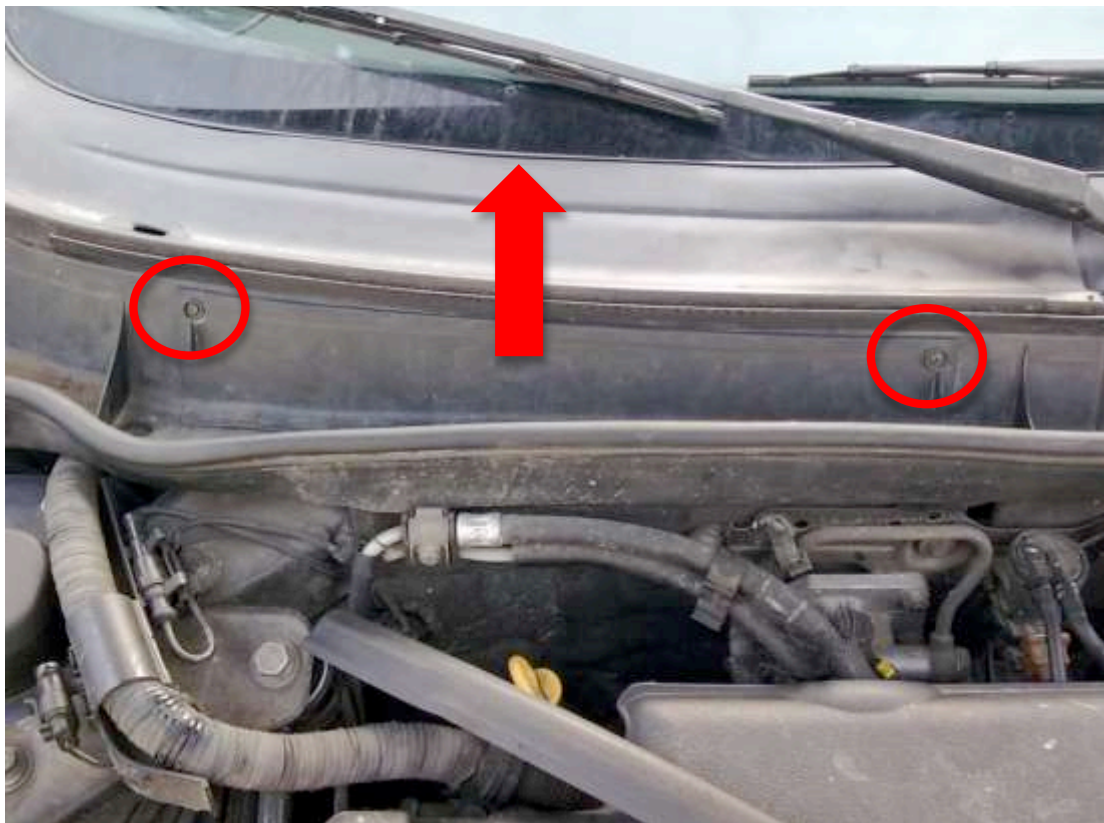

Remove the 2 screws (circled red) holding the plastic plate and lift the plate upwards (red arrow direction)



When that is done, you will see the filter.

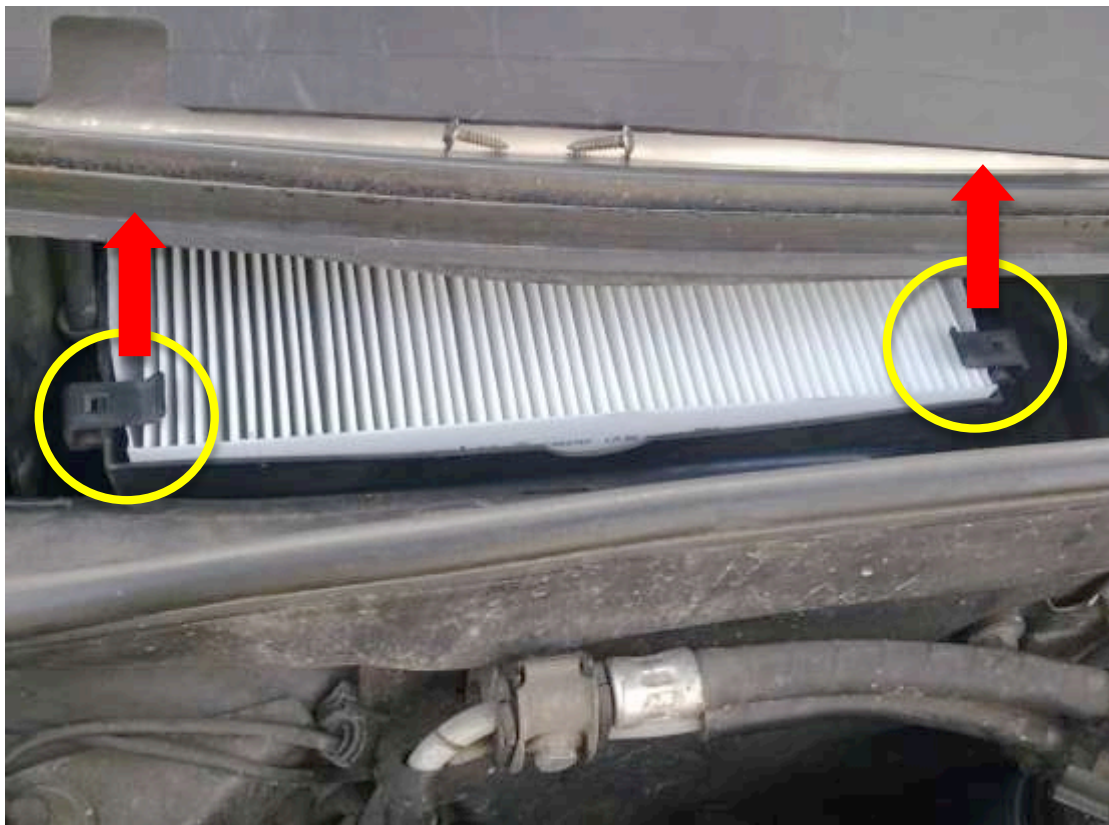

Now you need to pull up (red arrows) the clips (circled yellow) so the filter comes free.

Next pull out the filter and put in the new one.

Watch the flow direction of the filter !!!!!

That's it – refit the parts in reverse order and you have a new filter mounted.

This file is for private use only, no hosting on web sites is allowed. The file is property of



BOO-flat bravo/a owners organization and SvenJTD